




# Eyebrow Instructions


## As easy as 1-2-3 to install

For jambs larger than 3 1/2 inches, DO NOT SPLIT ARCH until you've done steps 1 and 2

1 Use a square to mark a line a short distance from one end of the eyebrow. Set your circular saw to the proper angle for the size of eyebrow (see the table at right). Cut along the line, making sure your saw blade is tilted inward as shown.

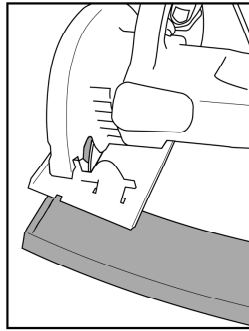

2 Measure across the width of the rough opening, then transfer that measurement to the arch and make another square line. Using the same degree setting, cut along that line.

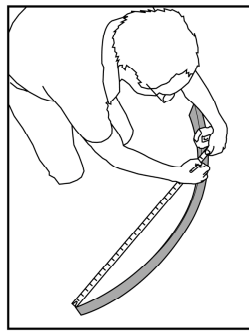

3 Slide the arch into the opening. Make sure that both ends measure down equally on both sides, then screw in place.



U.S. Patent No. 500,863

Arch-It products are made in the U.S.A.



### Sizes and Saw Angles

Order Number	Rough Opening	Saw Setting
B30	30-44 in.	15°
B40	44-53 in.	18°
B50	53-67 in.	28°
B60	67-77 in.	29°
B70	77-89 in.	31°
B80	89-101 in.	32°

### A few tips...

#### Are nail guns OK?

We recommend wood screws. In fact, nailing invalidates the warranty.


#### Symmetrical

There's no top or bottom — install without worrying which way is up.

#### Jamb wider than 3 1/2"?

First, follow steps 1 and 2.

Then, using a sharp sheetrock knife, scribe the groove on the back of the arch until the arch separates.

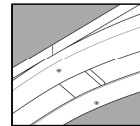

Rip a piece of scrap lumber to 7/8 in. to fit the gap between the arch and the header. Place one side of arch in the

opening, making sure that both sides measure down equally, then screw in place. From the bottom of the arch, square a line to the other side, then line up the second half and screw it in place.

#### Mudding, nailers

You can plaster directly onto the arch — just sheetrock over the wall side of arch, Zip it, attach corner bead and mud it.

#### Headers

Arches aren't designed to be structural support, only to be support for sheetrock.

## Perfect arches every time in minutes, not hours




Arch-It, Inc.  
1325 Carden Farm Drive  
Clinton, Tennessee 37716 • [www.arch-it-co.com](http://www.arch-it-co.com)  
865-457-7000 • 800-553-3513 • Fax: 865-457-4777

# Arch-It Eyebrow Instrucciones


**La instalación es tan fácil como un abrir y cerrar de ojos**

Para marcos mas grandes de 31/2", **N O RAJE EL ARCO** hasta cuando usted haga el paso 1 y 2

**1** Usa la escuadra para marcar la línea a una corte distancia de un extreme de la ceja de arco. Coloque la cortadora electrica al apropiado tamaño del ángulo de la caja de arco. (Mire tabla a la derecha). Corte junto a la línea, asegure que la oja decortar esta inclinada como demostrada.

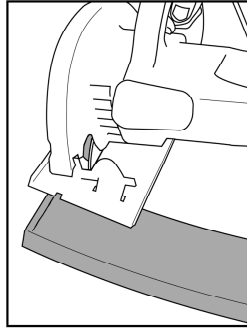

**2** Enmarque a través del ancho de la apertura del marco, despues transfiera esa marca al arco y haga otra línea cuadrada. Usando el mismo grado ya establecido, corte junto a la línea.

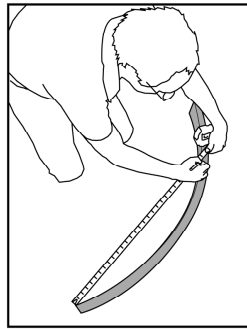

**3** Coloque el marco dentro el marco, asegure que los dos extremos marcan lo mismo a los dos lados, despues atornillelos en su lugar.



U.S. Patent No. 500,863

Los productos Arch-it son orgullosamente hechos en Los EEUU.



## Los Tamaño y Vio los Angulos

Numero de Orden	Abertura del Marco	Montadura de la Cortadora
B30	30-44 in.	15°
B40	44-53 in.	18°
B50	53-67 in.	28°
B60	67-77 in.	29°
B70	77-89 in.	31°
B80	89-101 in.	32°



## Algunos consejos...

### ¿Se puede usar una pistola de clavos?

Nosotros recomendamos tornillos para madera. Los clavos invalidan la garantía.

### Marcos mas anchos de 31/2"?

Primero siga pasos 1 y 2. Despues, usando un cuchillo adilado de labla roca, marque un canal en la parte trcera del arco hasta que el arco se separe. Rompa un pedaso de madera sobrada de 7/8" para encajar el hueco dentro del arco y aal travesano. Coloque un lado del arco en la apertura del marco, asegure que los dos lados marcan lo mismo, entonces atornillelos en su lugar.

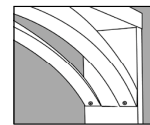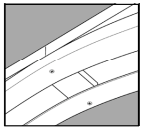

De abajo del arco, quadra una línea al otro lado, despues alinea la segunda mitad y atornillelo en su lugar.

### El acabado y apoyos

Usted puede enyesar directamente sobre el arco - ponga la tabla roca sobre el lado de la pared del arco, ciérrela, ponga guardavivos y acabarlo con barro.

### Travesaños

Recuerde que los arcos no son diseñados como soporte de la apertura, sino como apoyo de la tabla roca.

**Arcos perfectos cada vez, en minutos no en horas**



Arch-It, Inc.

1325 Carden Farm Drive

Clinton, Tennessee 37716 • [www.arch-it-co.com](http://www.arch-it-co.com)

865-457-7000 • 800-553-3513 • Fax: 865-457-4777